



## **ATLAS<sup>®</sup> 1 REMOTE SENSOR REPLACEMENT INSTRUCTIONS:**

1. Attach ½ moon plate to the back of the remote sensor using the small screws included.
2. Turn off power to Atlas<sup>®</sup> 1 before connecting remote sensor.
3. Carefully attach the CAT 45 cable to the remote sensor.
4. Be careful not to bend the 'Sensor Input' pins when inserting the CAT 45 cable. It could cause the sensor to function improperly.
5. Turn on power to Atlas<sup>®</sup> 1 and verify that remote sensor is operating properly.
6. The remote sensor is FACTORY CALIBRATED. It is not necessary to calibrate the unit after installation.

## **LIMITED WARRANTY:**

Titan Controls<sup>®</sup> warrants this product to be free from defects in materials and workmanship. The warranty term is for 90 days beginning on the date of purchase. Misuse, abuse, or failure to follow instructions is not covered under this warranty. Titan Controls<sup>®</sup> will, at our discretion, repair or replace the product covered under this warranty if it is returned to the original place of purchase. To request warranty service, please return the product, with original sales receipt and original packaging, to your place of purchase. The purchase date is based on your original sales receipt. Contact us at 888-808-4826 – Monday thru Friday – 8 to 5 PST if you need more information.